

# LAP-COUNTER D-LC



**ALGE**  
TIMING

## Table of contents

1	Functions.....	2
1.1	Count up (00).....	2
1.2	Count down (99).....	2
2	Powerpack.....	3

### Available Systemcomponents:

- Scoreboard with 1, 2 or 3 digits, single, double or tripple-sided with built-in powerpack and charger
- Manual switch 023-10
- Tripod for LAP-Counter, (TRI128 or TRIMAN depending on the LAP-Countermodell)
- Mains-Cable
- Bell, only for Type D-LCB

## 1 Functions

### 1.1 *Count up (00)*

- Display shows 00
- Pressing the manual button short – Display count up 1
- Pressing the button for 3 seconds – Display count down 1
- Pressing the button for 5 seconds will reset to zero, if there is already zero on the display it will change the counting-mode to count-down

### 1.2 *Count down (99)*

- Display shows 99 an (first digit is blinking).
- Set the desired start-value for the blinking digit
- Press the button now for 3 seconds, the next digit is now blinking
- Repeat the 2 previous points as long as you have adjusted all digits
- The display shows now the startvalue, no digit is blinking anymore
- Pressing the button short will increase the value for 1
- Pressing the button for 3 seconds will count up for 1
- Pressing the button for about 5 second will reset to the start-value.  
If the counter is already at the start-value it will change the counting-mode

## 2 Powerpack

The LAP-Counter has an integrated Powerpack and charger which supplies it for about 15 hours in continuous use.

To recharge the battery you have to supply the counter with mains for 14 hours.

**ATTENTION!! If the value will not be changed for 10 Minutes the counter will switch to power-save mode. Pressing the button once will reactivate the counter in the previous settings.**